

X2 COMBAT

RVX2-WASH Installation Guide

The Washer bracket/ nozzle assembly provides an effective wash facility for the X2 COMBAT camera; clamping neatly via the 4" PCD base mounting bolts (8mm clearance).

The bracket arm provides holes for cable-tying a washer pipe (not included). Do not over-tighten the cable-ties, as this will restrict the water flow.

To operate, simply set a preset position in the camera as a dedicated wash position (facing the washer nozzle as shown above), select the preset position, then enable the wash function (can be controlled by ONVIF/ API command or preset shortcut command).

The Wash relay in the RVX2-PSU is voltage-free, designed to control a wash pump's motor enable switch input (RVX2-ALM camera required for wash out control).



Contents

- Complete wash nozzle & bracket assembly

Required

- Washer tubing, 4mm inside diameter, 6mm outside diameter
- Wash bottle/ Water source
- Control source (RVX2-ALM camera and RVX2-PSU provide Wash relay control)

