



RV-PNDT

INSTALLATION SHEET

Bracket Installation

Fixings to mount the Pendant bracket will depend upon the fixing surface. It is important to use adequate quality fixings to safely support the complete dome assembly. Fixing slots on 4" PCD provide adequate clearance for 6mm bolts.

Flying Lead Installation

Install the fly lead optionally through the central mounting tube or via a 20mm gland entry point. Note the gland entry is supplied with a 20 x 1.5mm thread to accommodate industry 20mm glands.

Attaching The Pendant

Remove the casting cover on the Pendant mount by releasing two Allen screws from position 'A'. Unscrew the dome hand lock nut fully clockwise. Offer the dome to the bracket with orientation shown in fig 1. Note it is important to ensure that the dome is properly nested onto the bracket before securing the dome hand lock nut 'counter' clockwise. Connect the flying lead to the dome connector and replace the Pendant bracket casting cover.

Contents

- Pendant bracket assembly
- 4 metre flying lead
- 4mm Allen Key

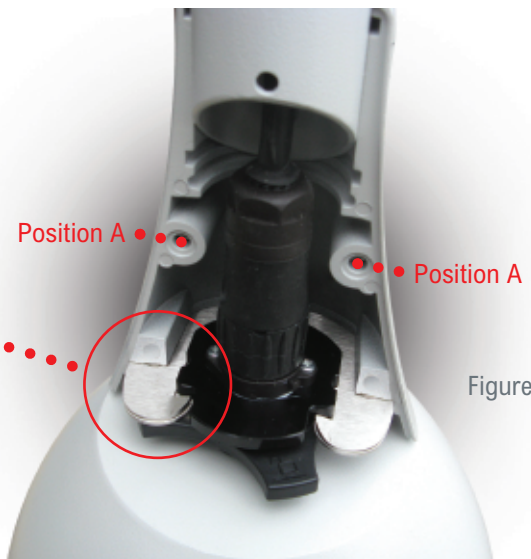


Figure 1